

TAH series(4-30A

Ordering information

-10

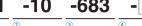

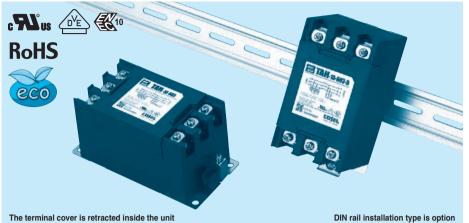

①Model Name ②Rated Current ③Line to ground capacitor code:See table 1.1.

table1.1 Line to ground capacitor code

Code	Leakage Current	Line to ground capacitor (nominal value)
683	2.5mA/5.0mA max	68000pF

Options
D:DIN rail installation type

 $*$ The dimensions change when the option is set. Refer to External view.

Features of TAH series

Ultra high-attenuation type of common mode noise from 10kHz to 1MHz

- · Three Phase 500 VAC
- · Push down type terminal block

Specifications


No.	Items	TAH-04-683	TAH-06-683	TAH-10-683	TAH-20-683	TAH-30-683	
NO.				IAH-10-003	IAH-20-003	IAH-30-003	
1	Rated Voltage[V]	AC Three Phase 500 50/60Hz					
2	Rated Current[A]	4	6	10	20	30	
3	Test Voltage (Terminal-Mounting Plate)	2,000 VAC (Cutoff Current = 100mA), 1minute at room temperature and humidity					
4	Isolation Resistance (Terminal-Mounting Plate)	500 VDC 100M Ω min at room temperature and humidity					
5	Leakage current 250/500V 60Hz	2.5mA/5.0mA max					
6	Voltage drop	1.5V max		1.0V max			
7	Safety agency approval temperatures	-25 to +85℃ (Refer to Derating Curve)					
8	Operating temperature	-40 to +85℃ (Refer to Derating Curve)					
9	Operating humidity	20 to 95%RH (Non condensing)					
10	Storage temperature/humidity	-40 to +85℃/20 to 95%RH (Non condensing)					
11	Vibration	10 to 55Hz, 19.6m/s²(2G), 3min. Period, 1hour each X, Y and Z axis					
12	Impact	196.1m/s²(20G), 11ms Once each X, Y and Z axis					
13	Safety agency approvals	UL1283, CSA C22.2 No.8 (C-UL) , DIN EN60939 VDE0565 Teil3-1, ENEC					
14	Case size (without projection) /Weight 63×64×128 mm [2.48×2.52×5.04 inches] (W×H×D) /620g max (Option : -D refer to external					efer to external viev	

Circuit Diagram

LINE LOAD **.**00 .00 2 5 .00 3

CY: Line to ground capacitor =: Mounting Plate

Derating Curve

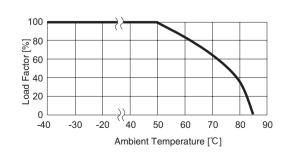


TAH,TAC series(4-30A)

External view


As this product is adopted push-down type terminal block, this appearance is as follows.

- 1)The terminal cover is retracted inside the unit.
- 2)The screws for connecting the terminals are held in the up right position.

Standard Type

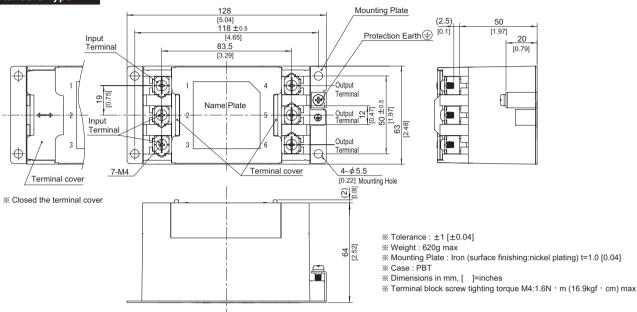

DIN rail installation Type

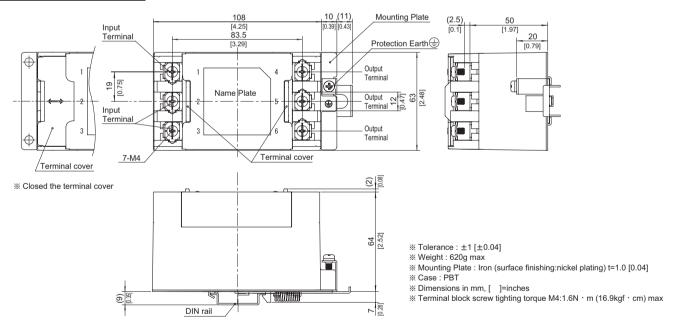

■Note when installing the EMI/EMC Filter on a DIN rail.

When the EMI/EMC Filter is grounded through the DIN rail, the proper noise attenuation may not be achieved.

Be sure to connect the protection earth (PE) of the EMI/EMC Filter body to the earth.

